

THE ULTIMATE GAME OF TAG

# LASER CHALLENGE™

## GOTCHA EXTREME!™

 
# INSTRUCTIONS

Are you ready to get Extreme? Laser Challenge™ Gotcha Extreme™ is the evolution of the Laser Challenge™ Game...

Laser Challenge™ Gotcha Extreme games can be as complex or as simple as you would like. It is highly recommended that you read the following instructions before playing Laser Challenge™ Gotcha Extreme.

Laser Challenge™ Gotcha Extreme Includes:

- 2 Laser Challenge™ Gotcha Extreme Blasters
- 2 Laser Challenge™ Gotcha Extreme Sensor Vests

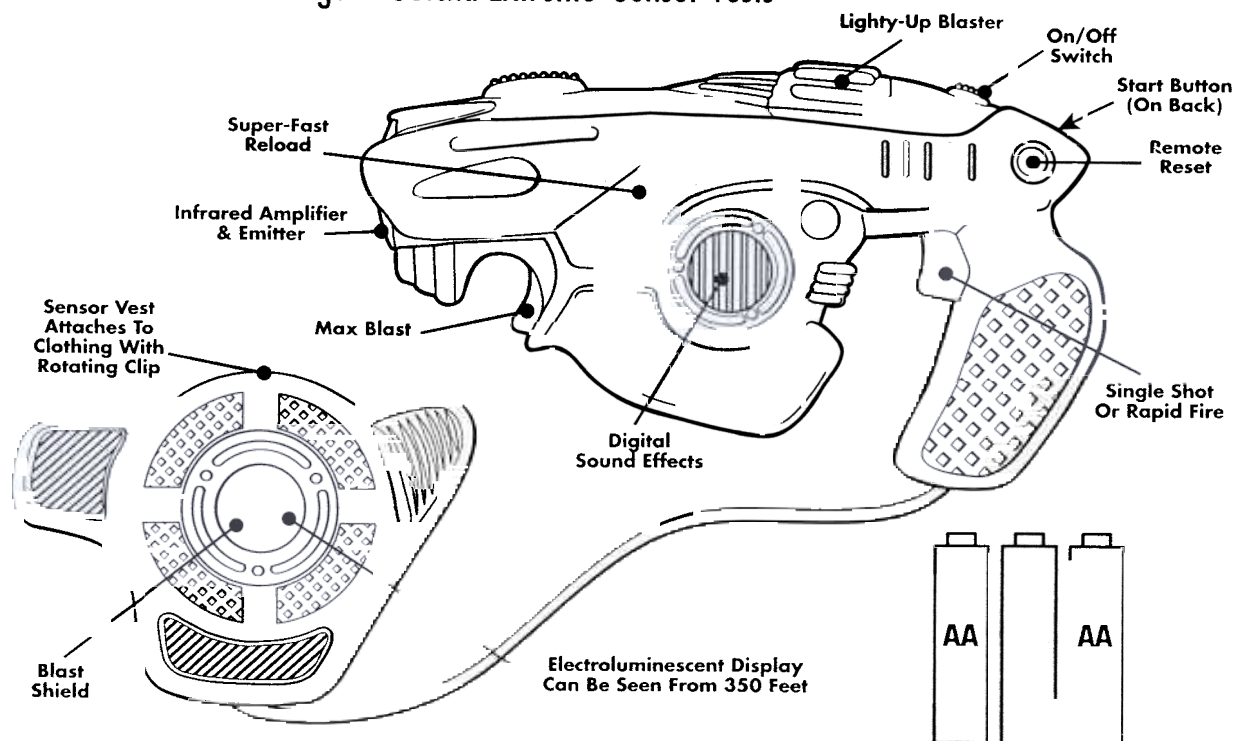

### Set up:

#### Batteries:

 
- Each Laser Challenge™ Extreme Blaster requires 3 "AA" Batteries. (not included)

**NOTE:** No Batteries are Required for the Sensor Vests.

- Ask an adult to unscrew the battery covers and install the batteries. (PICTURE #1)
- Be sure the battery polarities are correct.

#### NOTE:

Laser Challenge™ Gotcha Extreme Equipment works best with new

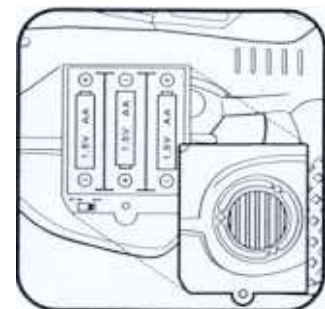


## Try Me Feature:

Before using your Laser Challenge™ Gotcha Extreme equipment you must disconnect the TRY ME feature. Push the switch located on the Gun inside the battery compartment, from the TRY ME position to the PLAY position. (PICTURE #2)

### NOTE:

 
NEVER set the Blaster to the "TRY ME" setting

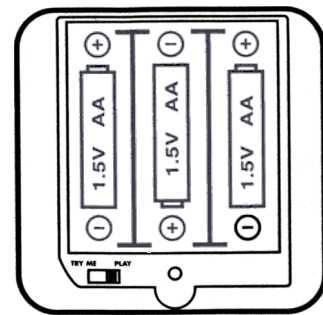

PICTURE #2


## Vest:

 - Before you play, you must 1st attach the Blaster to the vest. To do this, simply plug the cord from the blue Blaster into the blue vest, and the red Blaster into the red vest. (PICTURE #3)

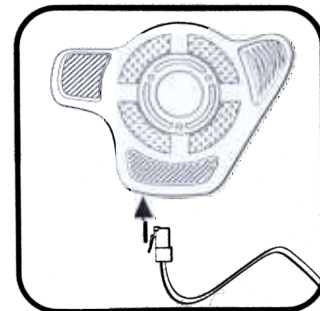

PICTURE #3

 - Your Laser Challenge™ Gotcha Extreme vest is equipped with a rotating clip. You can turn the clip so that the vest can be attached to any article of clothing.

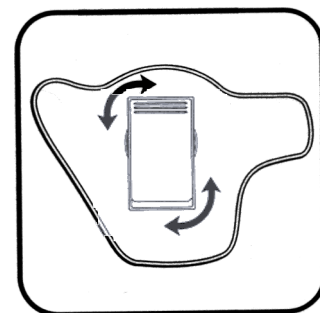

PICTURE #4

## Starting the Game:

### Mode:

In "Common Mode", the basic features including RESET, FIRE, BLAST SHIELD, MAX BLAST and HITS will work with most other Laser Challenge™ equipment including the original *LASER CHALLENGE™*, *LASER CHALLENGE™ TEAM FORCE 2000*, *LASER CHALLENGE™ MICRO MAX*, *LASER CHALLENGE™ RADAR EXTREME* and *LASER CHALLENGE™ CYBER SPLASH*.

- Advanced features such as Team Select and RADAR will NOT work with any Laser Challenge™ Equipment other than the Radar Extreme and Gotcha Extreme.
- In "Common Mode" the RADAR and team select features are NOT available.

 
### NOTE:

Laser Challenge™ Gotcha Extreme does NOT work with the Laser Challenge™ V2 ELS Game System Computer.




## To Play in "Game Mode":


1. Select the Game Select switch to the "C" position. (PICTURE #5)
2. Turn both Lasers to the "on" position by sliding the on/off switch forward. (PICTURE #6)
3. Put on your vest using the clip.
4. Press the START button on your Blaster. (PICTURE #7)
5. Aim a laser at any vest and press the RESET button to reset the laser and the vest. (PICTURE #8)

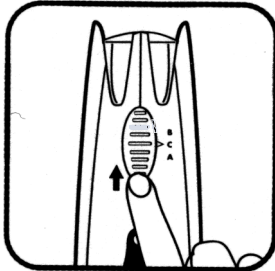


PICTURE #5

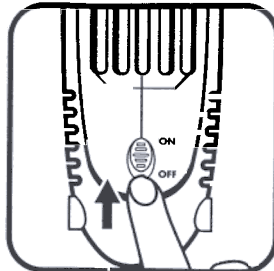 

PICTURE #6

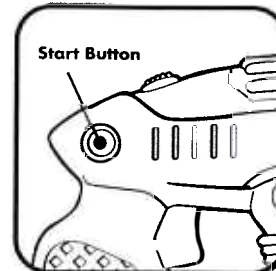 

PICTURE #7

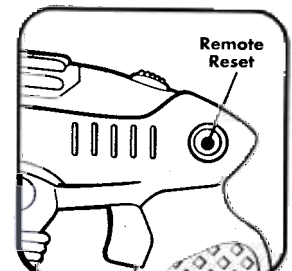 


PICTURE #8

**NOTE:** ALL VESTS AND ALL LASERS MUST BE RESET PRIOR TO STARTING A GAME  
YOU CANNOT RESET YOUR OWN VEST WITH YOUR OWN LASER.

## Reload:

 - In order to fire, you must reload your Blaster. To reload press and hold the trigger and point your Blaster down towards the ground. (PICTURE #9)
- Each reload will give you 25 shots. You can only reload after you have used up all 25 shots.
- Your laser can rapid-fire by pressing the trigger repeatedly.
- When you are out of shots you will hear a "click" from your Blaster indicating that you need to reload.

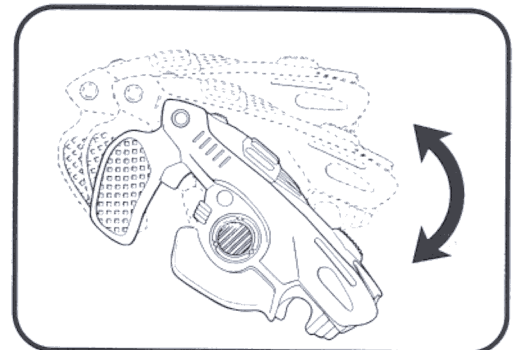

PICTURE #9

## Hits:

- Once your vest has been reset, your vest can be hit!
- Each time a vest is hit, the electro-luminescent display will flash and the hit sound will be heard.
- On the ninth hit, a warning tone will alert the player that there is only one more hit before elimination.
- After 10 hits, the player is eliminated and the vest will shut down.

## Max Blast:

- A Max Blast makes one blast from your blaster register as 3 hits on your opponent's vest.
- 30 seconds after your laser has been reset, you will hear a tone from your laser indicating that your Max Blast feature is now available.

### NOTE:

You cannot use your Max Blast until your Blaster has been on for 30 seconds.

## To Fire a Max Blast:

1. Press the front trigger on your Blaster.
2. If you hit your opponent, 3 hits will register on their vest.

### NOTE:

You can only use the Max Blast function 3 times per game.

 


## Blast Shield:

- A Blast Shield gives you a 5 second period of time in which your vest cannot be hit.
- 30 seconds after your vest has been reset, you will hear a tone from your vest indicating that your Blast Shield feature is now available.

## To select a Blast Shield:

1. Press the Blast Shield Button on the vest. (PICTURE #10)
2. The Blast Shield light will flash indicating that you are protected.

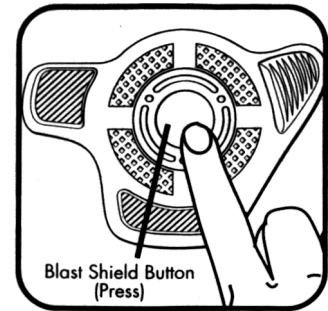

PICTURE #10

### NOTE:

You can only use the Blast Shield function 3 times per game

## "Team Select" Mode:

- Team Select Mode is an advanced feature found only on Laser Challenge™ Gotcha Extreme Systems
- The Team Select Mode allows you to set your laser and vest to one of two different teams (Team A or Team B).

### NOTE:

Either of the Lasers and Vests (red or blue) can be set to Team A or Team B.

- In Team Select Mode the Radar feature is active and the Lasers and Vest will not allow members of the same team to HIT each other.

## RADAR Feature:

- The RADAR feature is an audible tone that will alert you when an opponent (member of the opposite team) has his laser pointed at your vest. The purpose of the RADAR feature is to allow you enough time to get out of your opponents blasting zone before you are hit.

## To Play in Team Select Mode:

- Before starting the game the players must decide which players will be on Team A and which players will be on Team B.

## To Select Team A or B:

Before turning your Blasters on, slide the team select switch to either the A position for Team A or the B position for Team B. Follow the direction above to start the game.

**NOTE:** A Blaster set to Team A can NOT reset another Team A Blaster, a Blaster set to Team B can NOT reset another Team B Blaster.

## Special Codes:

Unlock the secret codes to activate special feature

Visit us on the internet at:  
[www.laser-challenge.com](http://www.laser-challenge.com)

- Never mix old & new batteries.
- Never mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Firing distance may be affected by weather and lighting conditions.
- Infrared beam cannot be seen.
- Does not contain a real laser device.

We're Always Here to Help!  
We know you are going to enjoy playing with your

## Laser Challenge™

If you have any questions or comments, our  
Customer Service Representatives will be glad to help  
Call 1-800-222-9060

Between 9:00 am and 5:00 pm EST.  
Monday through Friday, or write to:  
TOYMAX INC.

**BE RESPONSIBLE.  
NEVER POINT YOUR LASER AT ANYONE THAT IS NOT A PLAYER**

