
INSTRUCTIONS:

Are you ready to get Extreme? Laser Challenge™ Radar Extreme™ is the evolution of the Laser Challenge™ Game...

Laser Challenge™ Radar Extreme™ games can be as complex or as simple as you would like.
It is highly recommended that you read the following instructions before using
your Laser Challenge™ Radar Extreme™ equipment.

Laser Challenge™ Radar Extreme™ Includes:

- 2 Laser Challenge Extreme Blasters
- 2 Laser Challenge Extreme Vests
- 2 Sets of Vest Chest Straps

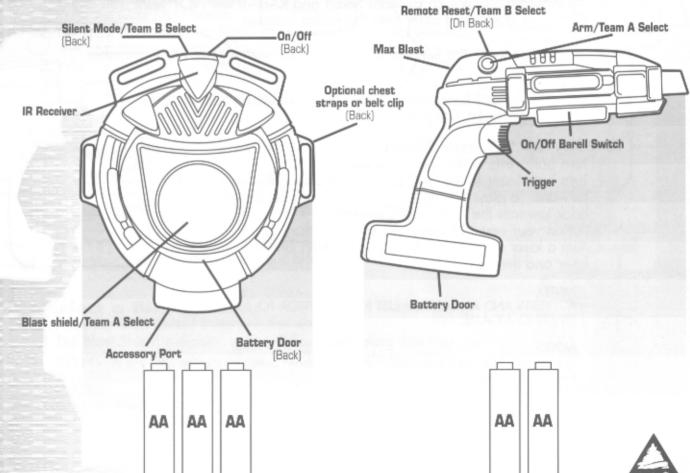



Try Me Feature

Before using your Laser Challenge™ Extreme Radar™ equipment you must remove the "TRY ME" Cord.

NOTE:

NEVER set the vest to the "TRY ME" setting. You may dispose of the "TRY ME" cord. It has no use once Laser Challenge™ Radar Extreme™ equipment is unpacked.

Setup:

Batteries:

- Each Laser Challenge™ Radar Extreme™ Blaster requires 2 "AA" Batteries
- Each Laser Challenge™ Radar Extreme™ Vest requires 3 "AA" Batteries
- Ask an adult to unscrew the battery covers and install the batteries.
- Be sure the battery polarities are correct.

NOTE:

Laser Challenge™ Radar Extreme™ Equipment works best with new batteries

Vest Straps:

The vest straps are attached to the vest but can be removed.

 The clip on the back of the vest can be used to attach the vest to your shirt or belt.

Starting the Game:

Game Mode:

In "Game Mode", the basic features including RESET, FIRE, BLAST SHIELD, MAX BLAST and HITS will work with all other Laser ChallengeTM equipment including the original LASER CHALLENGETM, LASER CHALLENGE MICRO MAXTM, LASER CHALLENGE V2TM, and LASER CHALLENGE CYBER SPLASHTM.

- Advanced features such as Team Select and RADAR will NOT work with any Laser Challenge Equipment other than the Radar Extreme.
- In "Game Mode" the RADAR and Team Select features are NOT available.

NOTE:

Laser Challenge™ Radar Extreme™ does NOT work with the Laser Challenge V2™ ELS™ Game System Computer.

To Play in "Game Mode":

1. Turn both vests to the "on" position

2. Turn both Laser to the "on" position by sliding the barrel switch forward. To play with no laser sounds, slide the barrel switch back towards the "silent on" position.

3. Put on your vest with either the straps or the clip

 Aim a laser at any vest and press the RESET button to reset the laser and the vest.



NOTE:

ALL VESTS AND ALL LASERS MUST BE RESET PRIOR TO STARTING A GAME.

NOTE:

To play with **NO** vest sounds push the "Silent Mode" button on the vest after it is in the "on" position.



Reload:

 In order to fire, you must reload your Blaster. To reload press the RELOAD button on the side of the Blaster.

- Each reload will give you 25 shots.
 Your laser can rapid-fire by holding the trigger or fire single blasts by pressing the trigger repeatedly.
- When you are out of shots you will hear a "click" firm your Blaster indicating that you need to reload.

NOTE:

You can reload as many times as you wish in each game.

Hits:

Once your vest has been reset, your vest can can be hit!

- Each time a vest is hit, the electro-luminescent display will flash and the hit sound will be heard.
- On the ninth hit, a warning tone will alert you that there is only one more hit before elimination.
- After 10 hits you are eliminated and the vest will shut down.

Max Blast:

 A Max Blast makes one blast from your blaster register as 3 hits on your opponent's vest.

 30 seconds after your laser has been reset, you will hear a tone from your laser indicating that your Max Blast feature is now available.

You can not use your Max Blast until your Blaster has been on for 30 seconds.

To select a Max Blast:

1. Press the Max Blast Button

- 2. The Max Blast indicator light will become solid indicating that the next time you fire will be a Max Blast
- 3. When you are ready to blast your opponent, simply pull the trigger of your Blaster.
- 4. If you hit you opponent, 3 hits will register on their vest.

NOTE:

You can only use the Max Blast function 3 times per game.

Blast Shield:

- A Blast Shield gives you a 5 second period of time in which your vest can not be hit.
- 30 seconds after your vest has been reset, you will hear a tone from your vest indicating that your Blast Shield feature is now available.

To select a Blast Shield:

1. Press the Blast Shield Button on the vest

2. The Blast Shield indicator light will flash indicating that you are protected and you will hear the Blast Shield sound.

you can only use the Blast Shield function 3 times per game.









"Team Select" Mode:

- Team Select Mode is an advanced feature found only on Laser Challenge™ Radar Extreme™ equipment
- The Team Select Mode allows you to set your laser and vest to one of two different teams (Team A or Team B).

NOTE:

Either of the Lasers and Vests (red or blue) can be set to Team A or Team B.

 In Team Select Mode the Radar feature is active and the Lasers and Vest will not allow members of the same team to HIT each other.

RADAR Feature:

 The RADAR feature is an audible tone that will alert you when an opponent (member of the opposite team) has his laser pointed at your vest. The purpose of the RADAR feature is to allow you enough time to get out of your opponents blasting zone before you are hit.

To Play in Team Select Mode:

 Before starting the game the players must decide which players will be on Team A and which players will be on Team B.

Team A Players

To set your Laser and vest to Team A follow these steps:

Laser:

Press and hold the ARM button on the Laser.

While the button is pressed turn the Laser to the "on" position by sliding the barrel switch forward or to play with no laser sounds slide the barrel switch back (towards the "silent on" position)

You will hear two ascending tones to verify that your Laser is set to Team A (unless you select silent mode)

Vest:

1. Press and hold the BLAST SHIELD button located on the front of the vest.

2. Turn the on/off switch to the "A/B" position.

You will hear two ascending tones to verify that your Vest is set to Team A.

Team B Players:

To set your Laser and vest to Team B follow these steps:

Laser:

Press and hold the RESET button on the Laser.

2. While the button is pressed Turn the Laser to the "on" position by sliding the barrel switch forward or to play with no laser sound slide the barrel switch back (towards the "silent on" position.)

3. You will hear two descending tones to verify that your Laser is set to Team B.

Vest:

1. Press and hold the TEAM B SELECT button located on the back of the vest.

2. Turn the on/switch to the "A/B" position.

You will hear two ascending tones to verify that your Vest is set to Team B.

NOTE:

Each time a Team A Laser is aimed at a TEAM B vest or a Team B Laser is aimed at a Team A vest, the vest will emit the RADAR warning tone.

NOTE:

All other features are the same as "Game Mode"

•Never mix old & new batteries.

 Never mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Do not use rechargeable batteries.

 Different types of batteries or new and used batteries are not to be mixed.

Non-rechargeable batteries are not to be recharged.

*Only batteries of the same or equivalent type as

recommended are to be used.

Batteries are to be inserted with the correct polarity.
 Exhausted batteries are to be removed from the toy.

*The supply terminals are not to be short-circuited.

. Please keep information for future reference.

Were Always Here to Help!
We know you are going to enjoy playing with your

Laser Challenge™

If you have any questions or comments, our Customer Service Representatives will be glad to help.

Call 1-800-222-9060

Between 9:00 am and 5:00 pm EST. Monday through Friday, or write to: TOYMAX INC.

BE RESPONSIBLE. NEVER POINT YOUR LASER AT ANYONE THAT IS NOT A PLAYER