

LASER CHALLENGE™

MICROMAX™ INSTRUCTIONS


Ages 8+

MicroMax™ Blasters lets you take the technology and performance of Laser Challenge™ gear and stick it in your pocket! The following instructions will explain how to use the worlds first full function mini laser system!

Battery Requirements:

each laser requires 2 AAA batteries.
each receiver requires 3 AAA.

Components:

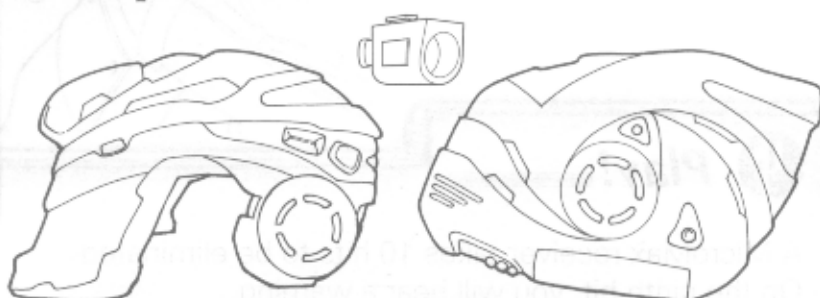


2 MicroMax Laser Blasters, 2 Laser Amplifiers and 2 MicroMax Receivers.

1 Install all Batteries:

Lasers

Remove the screw in the battery door of the lasers. Insert 2 AAA batteries per laser (as shown inside the battery door). Replace the battery doors and the screws.

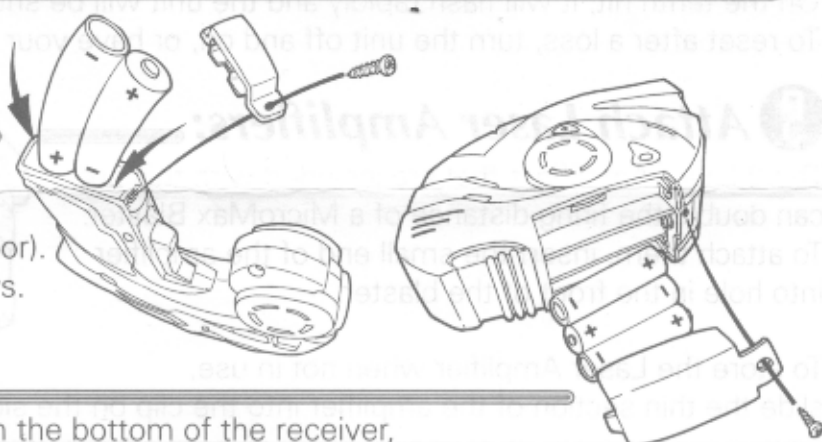

Receivers

Remove the screw in the battery door on the bottom of the receiver, Insert 3 AAA batteries per receiver (as shown inside the battery door). Replace the battery doors and the screws.

2 Power up and Arm!



Lasers


Push the switch on the left side of the lasers to the position marked  (Sound) for normal play.
Push it to position marked  (No Sound) for SILENT mode.

Use the button on the top of your laser to reset receivers to start a new game.

To reload with 12 blasts, hold the trigger in for approximately 2 seconds – the laser will automatically re-arm.


Receivers

Push the switch on the back of the receivers to the position marked  (Sound) for normal play.
Push it to position marked  (No Sound) for SILENT mode.

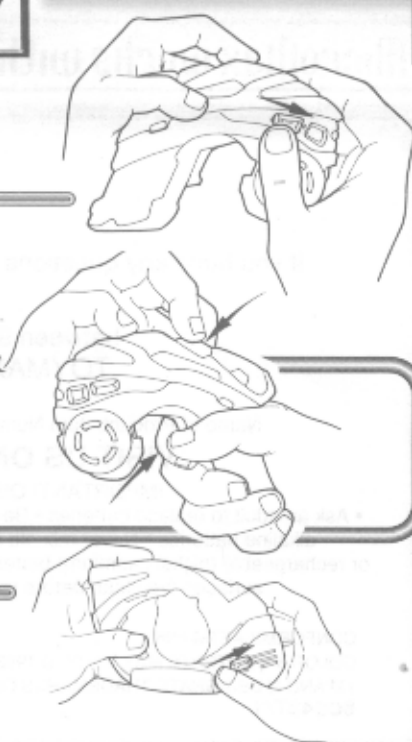

3 Attach receivers:

Place the clip on the back of the receiver on your belt or anything else that it can securely clip to (pant waist, pocket...)

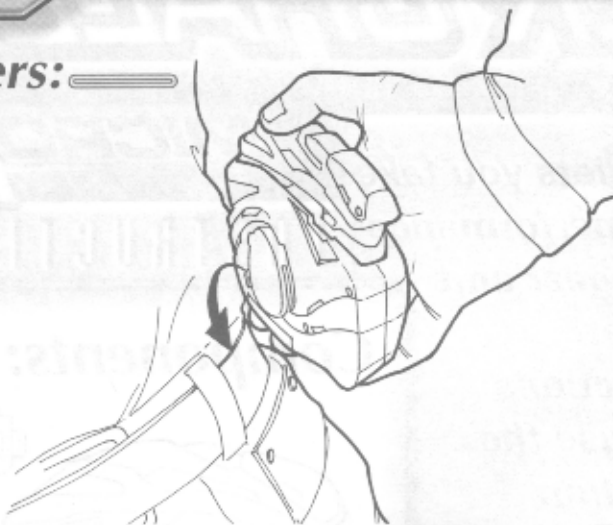

The Laser blaster & receiver clip together for compact storage, as shown.

4 Play!

A MicroMax receiver takes 10 hits to be eliminated. On the ninth hit, you will hear a warning.


In "SILENT" mode, you will see the receiver light flash on every hit. On the ninth hit, the flash will be longer.

On the tenth hit, it will flash rapidly and the unit will be shut down!

To reset after a loss, turn the unit off and on, or have your opponent reset you.

5 Attach Laser Amplifiers:

The 2 Laser Amplifiers that are included with this set can double the firing distance of a MicroMax Blaster. To attach them, insert the small end of the amplifier into hole in the front of the blaster.

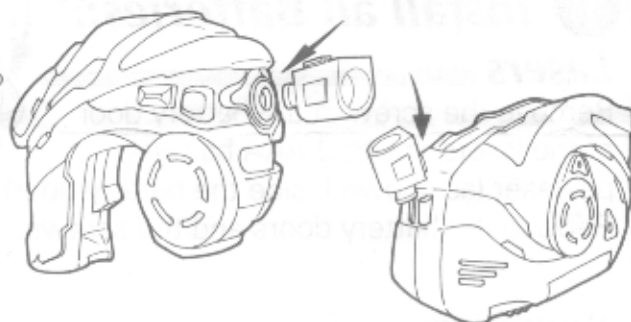

To store the Laser Amplifier when not in use, slide the thin section of the amplifier into the clip on the side of the Laser Receiver as shown.

MicroMax works with all other Laser Challenge Equipment - sold separately.

We're Always Here To Help!
We know you are going to enjoy playing with your

LASER CHALLENGE™

If you have any questions or comments, our Customer Service Representatives will be glad to help you.

Call: 1-800-222-9060

between 9:00 am and 5:00 pm EST. Monday through Friday, or write to:
TOYMAX INC., 125 East Bethpage Road, Plainview N.Y. 11803

Please include the following information:

Name of Product, Item Number, Sales Receipt, Date of Purchase, Where Purchased and a Brief Description of Problem.

VISIT US ON THE INTERNET AT <http://www.laserchallenge.com>

IMPORTANT! OBSERVE THE FOLLOWING PRECAUTIONS TO PREVENT BATTERY LEAKAGE!

- Ask an adult to replace batteries • Be sure to insert batteries as instructed. Always follow the battery manufacture's instructions • Always use alkaline batteries • Never mix old and new batteries. Replace batteries at the same time • Never mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not use rechargeable batteries • Always remove weak or dead batteries • Check that the contact surfaces are clean before installing batteries • Remove batteries from the battery compartments before extended storage.

CONFORMS ASTM-F963

COLOR & CONTENTS MAY VARY © 1998 TOYMAX INC. PLAINVIEW, N.Y. 11803 U.S.A. ALL RIGHTS RESERVED

TM AND © DESIGNATE TRADEMARKS OF TOYMAX INC. & TOYMAX (Bermuda) Limited. MADE IN CHINA

80543T/1

